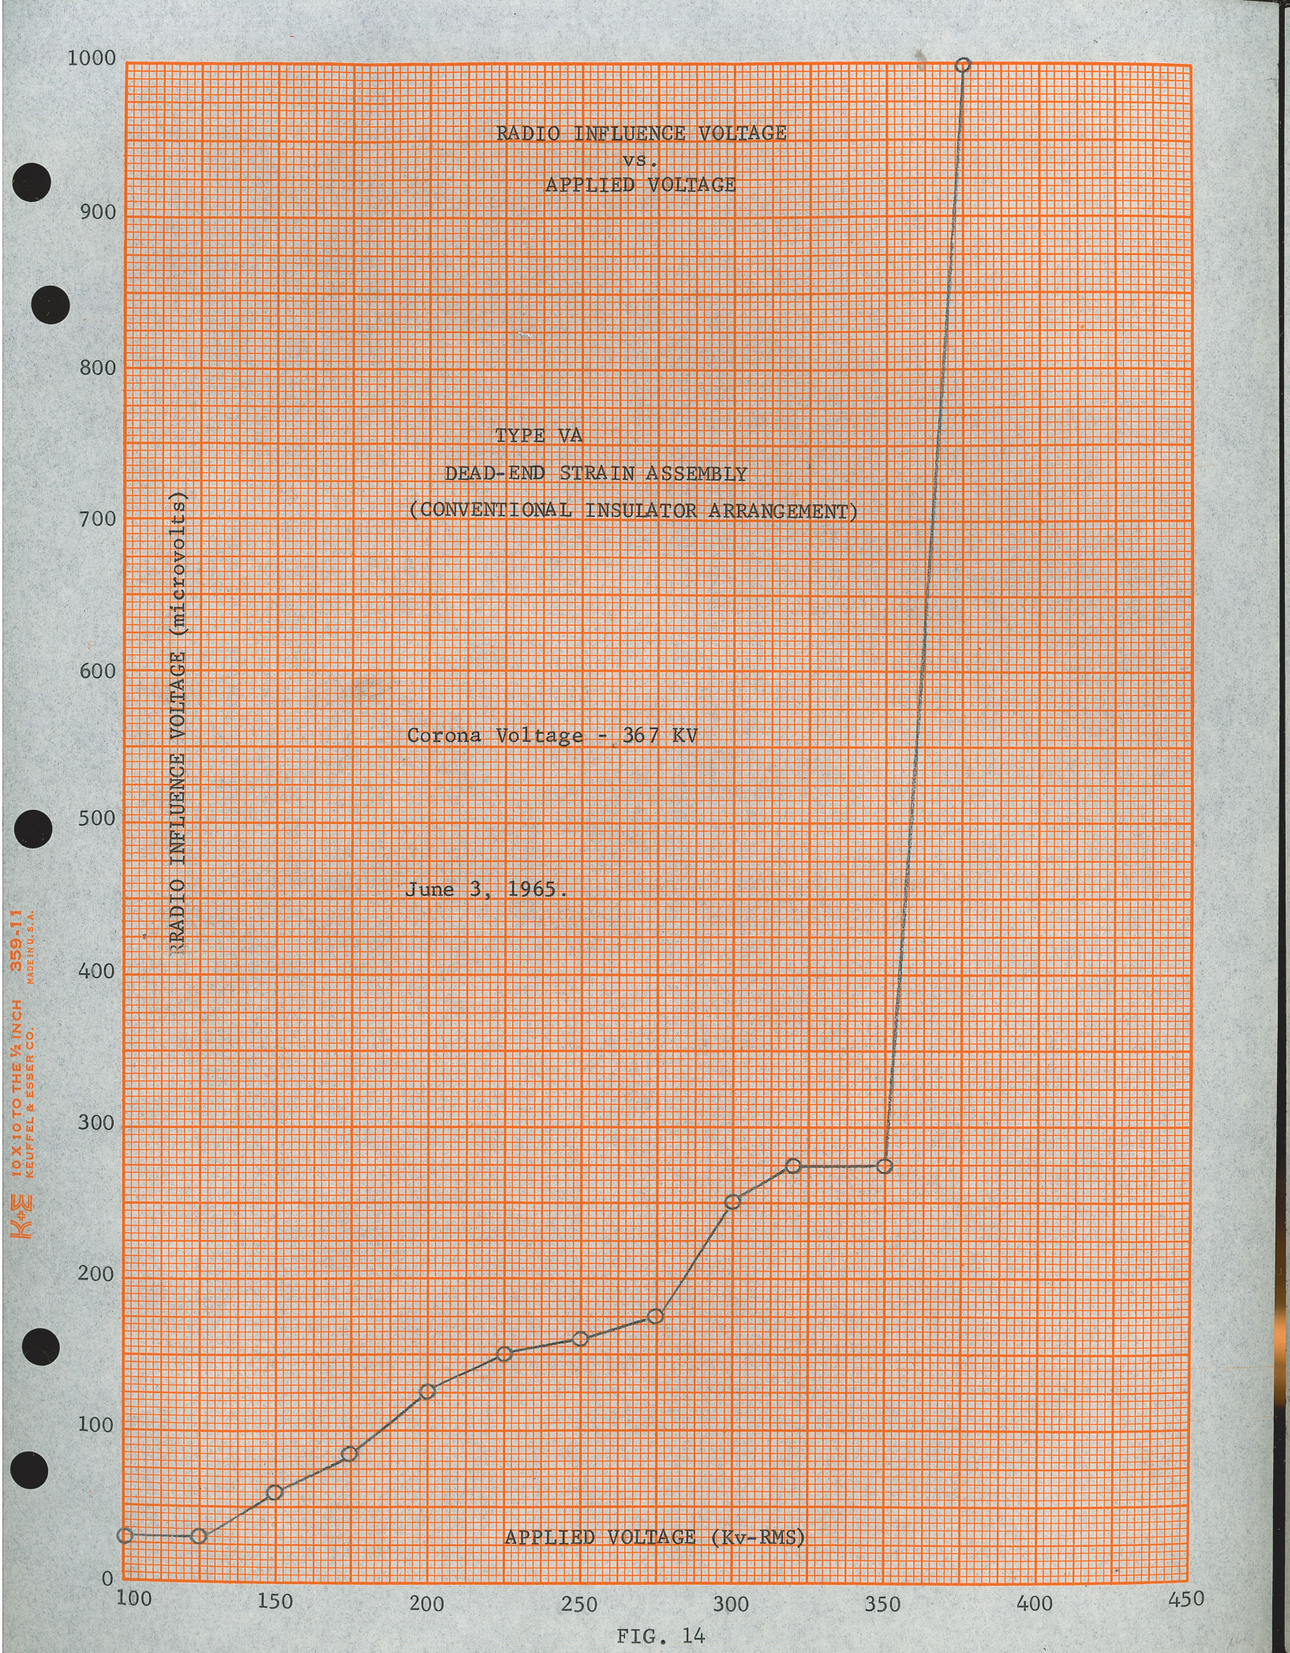
RADIO INFLUENCE VOLTAGE
vs.
APPLIED VOLTAGE
TYPE VA
DEAD-END STRAIN ASSEMBLY
(CONVENTIONAL INSULATOR ARRANGEMENT)
Corona Voltage - 367 KV
June 3, 1965.
RADIO INFLUENCE VOLTAGE (microvolts)
APPLIED VOLTAGE (Kv-RMS)
0
100
200
300
400
500
600
700
800
900
1000
100
150
200
250
300
350
400
450

FIG. 14

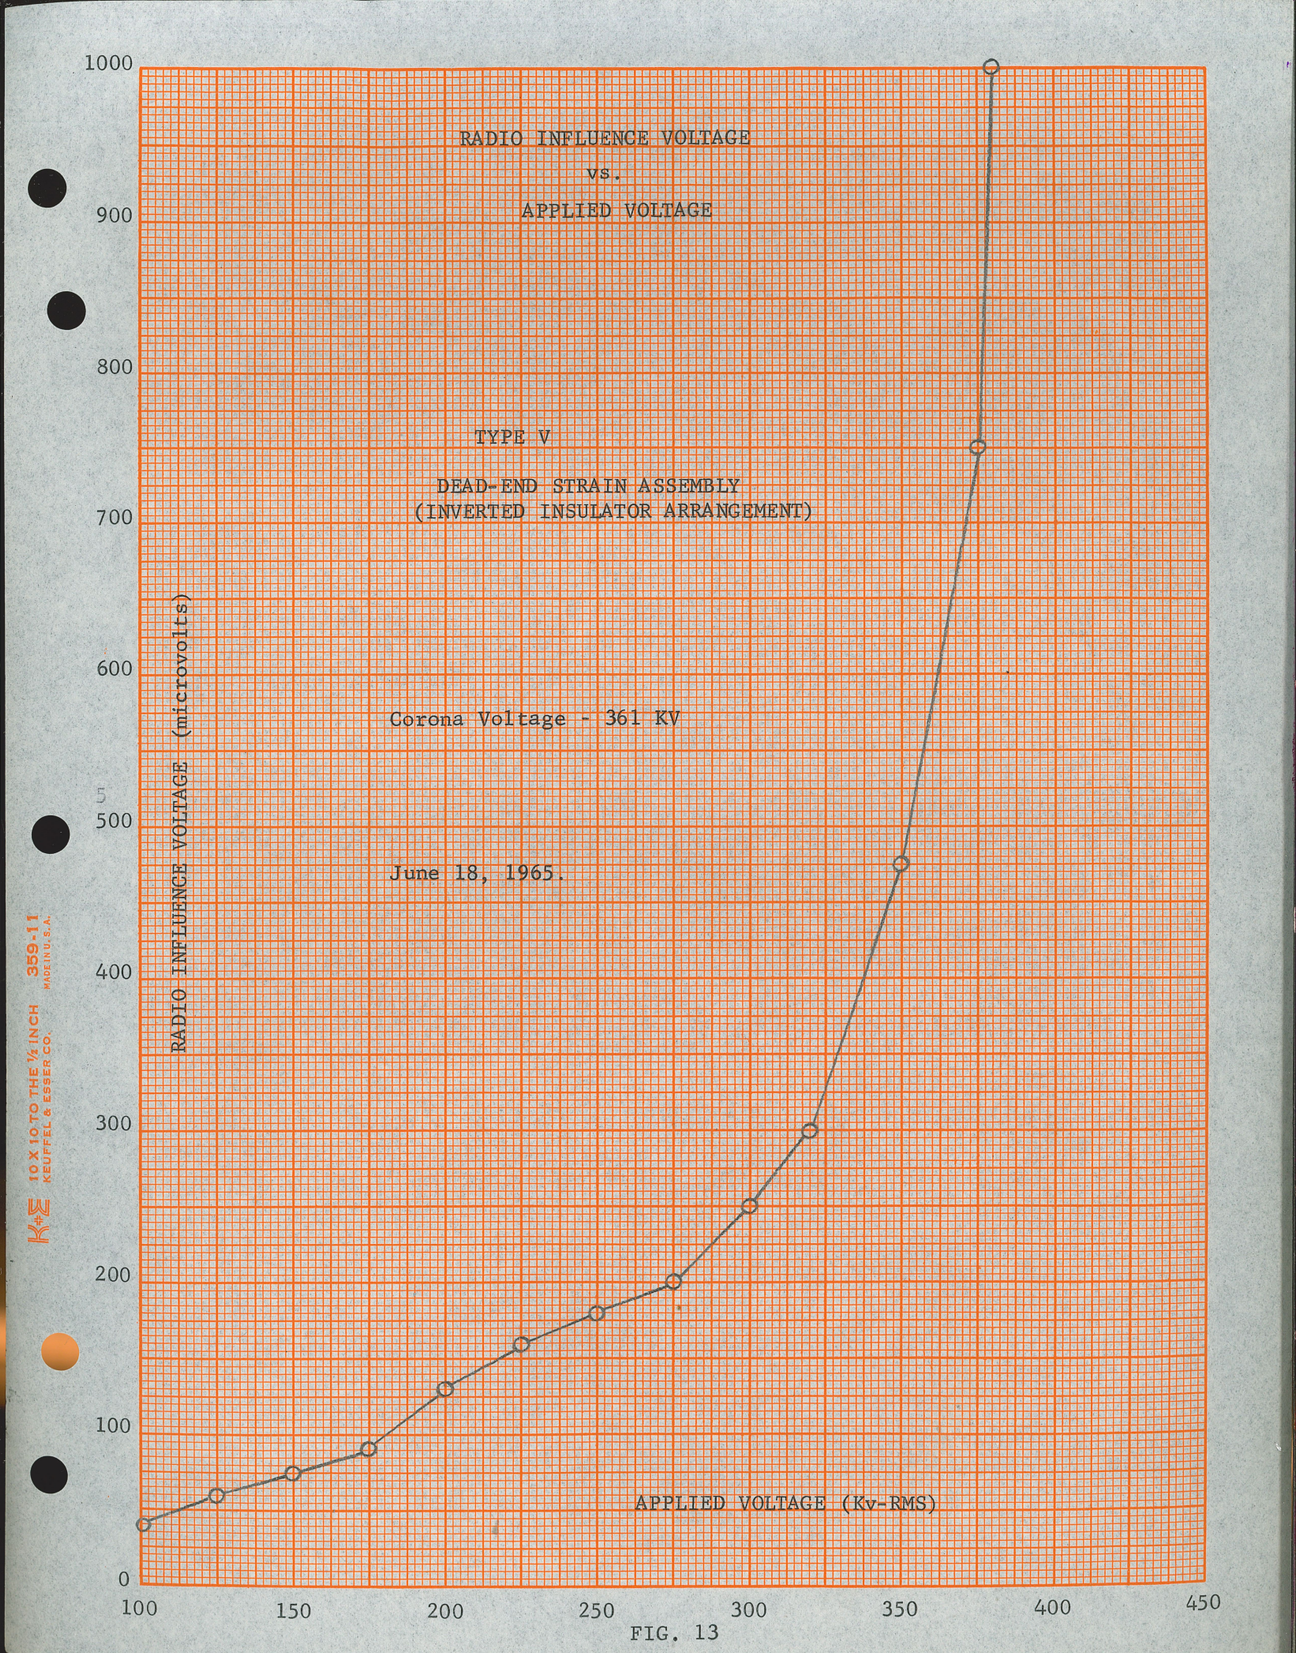
RADIO INFLUENCE VOLTAGE
vs.
APPLIED VOLTAGE
TYPE V
DEAD-END STRAIN ASSEMBLY
(INVERTED INSULATOR ARRANGEMENT)
Corona Voltage - 361 KV
June 18, 1965.
RADIO INFLUENCE VOLTAGE (microvolts)
APPLIED VOLTAGE (Kv-RMS)
0
100
200
300
400
500
600
700
800
900
1000
100
150
200
250
300
350
400
450

FIG. 13